

NOTE:

- 1. Install gate post and brace panel as shown. Use M12 x 25 mm machine bolts and nuts.
- 2. Paint all of the fence posts and braces the same color as the gate.
- 3. Furnish concrete conforming to Section 601.

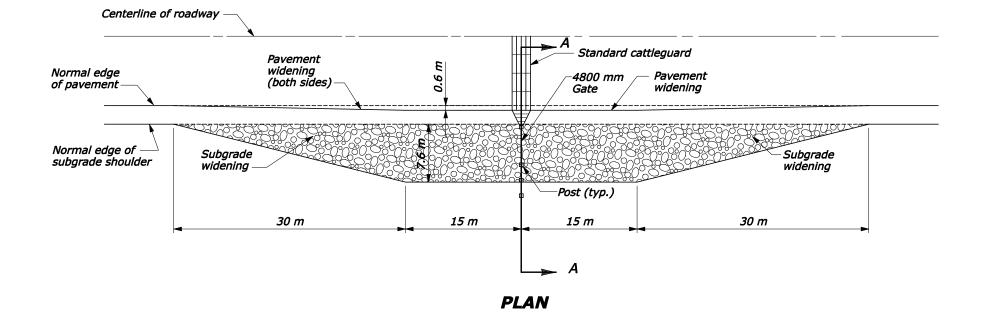

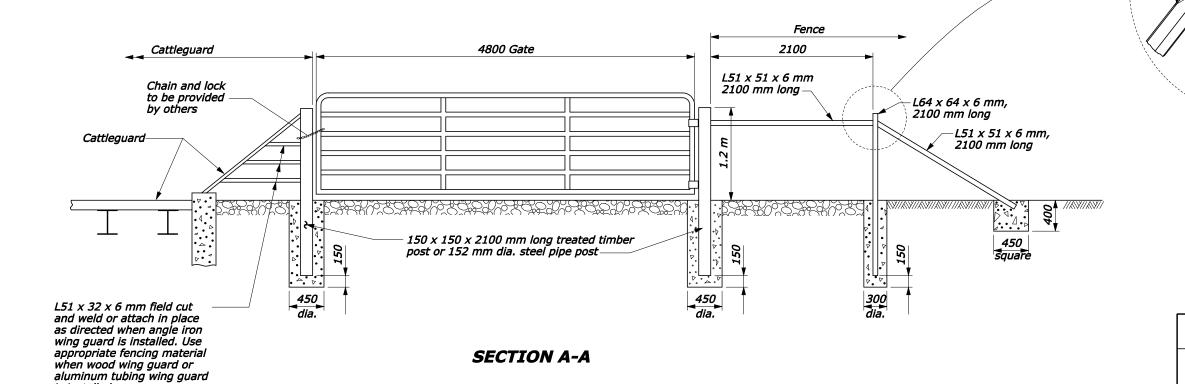

U.S. DEPARTMENT OF TRANSPORTATION FEDERAL HIGHWAY ADMINISTRATION
CENTRAL FEDERAL LANDS HIGHWAY DIVISION

- 14 mm dia. holes drilled or punched for bolts

Cut 50 mm from side

of brace and bend bottom to fit

METRIC DETAIL

CATTLEGUARD GATE AND WIDENING

NO SCALE DETAIL APPROVED FOR USE 07/2004

DETAIL CM619-52

is installed.